
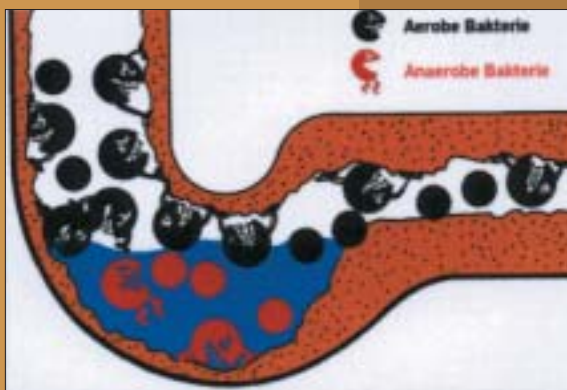



# LEYCO®-BIO CYM

## BIODEGRADABLE GREASE SEPARATION FOR THE MAINTENANCE OF WASTE WATER AND SEWAGE PIPES

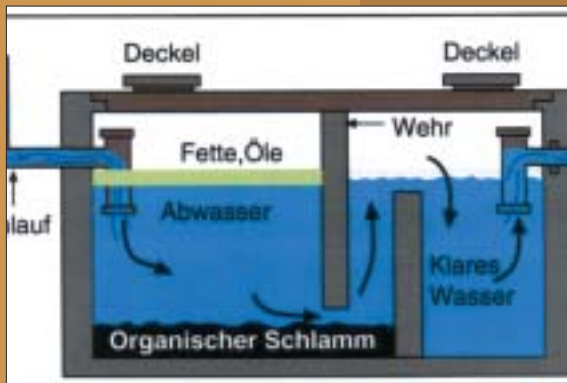

- Separates grease, fat and proteins
- Keeps waste pipes clear and free flowing
- Improves waste water classification levels
- Controls unwanted odours
- User friendly material
- Simple application

LEYCO®-BIO CYM is a biological maintenance product which liquefies fat deposits and breaks up proteins and cellulose in drainage pipes. It also acts to eliminate unpleasant odours.

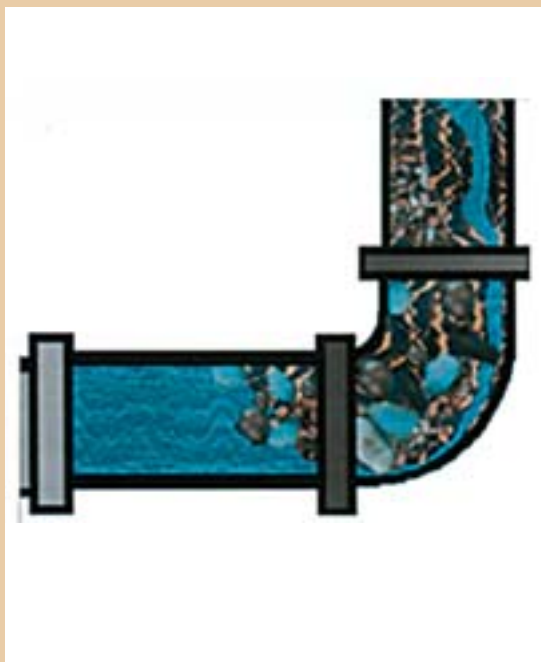

## LEYCO®-BIO CYM

Product-No. 20.011

### BIODEGADABLE GREASE SEPARATION FOR THE MAINTENANCE OF WASTE WATER AND SEWAGE PIPES

#### DESCRIPTION

LEYCO®-BIO CYM (Sachet) contains three types of micro organism, enzymes and nutrients which actively degrade fat, proteins and cellulose. It is not a dangerous material and can be used without danger to health.

#### ADVANTAGES

- Controls smells
- Harmless to handle – self contained parcel
- Extends the time span between the emptying of tanks and cleaning of pipes
- Improves function of separators
- Keeps pipes free of blockages

#### TECHNICAL DATA

Density:	1,0 g/ml
Colour:	sandcolours
Flash Point:	Not Applicable
Form:	Powder
pH Value:	8,2 - 8,6
Effective pH :	5,0 - 9,0
Effective Temp Range:	5 - 45°C

#### APPLICATION

Put sachet into 10 ltrs of luke warm water, agitate for 10 minutes.

##### Fat seperator

First application: 3 luggage per m<sup>3</sup> of the storage tank.

##### Further application:

Under 250 meals per day	1 sachet per week
250 – 500 meals per day	2 sachets per week
500 + meals per day	3 sachets per week
Drainage pipes	1 sachet per 2 weeks
Cesspits/Holding tanks	3 sachets per 3m <sup>3</sup>
Regular maintenance	1 sachet per 2 weeks through WC

#### STORAGE

Store in a cool dry place, Protect from frost.  
Shelf life min. 30 months.

#### HEALTH AND SAFETY INFORMATION

Avoid contact with eyes.

If swallowed do not induce vomiting, get immediate medical assistance and present the label to the doctor.

Avoid contact with the skin (especially open wounds). If contact occurs, wash thoroughly with soap and warm water. Do not store with food or other consumable products.

##### REMARK

Whilst information and/or specification contained herein is to the best of our knowledge true and accurate, and is based on many years experience, we cannot accept any liability either directly or indirectly arising from the use of our products, whether or not in accordance with any advice, specification or recommendation given by us, as we have no direct or continuous control over how or where our products are applied.

LEYDE-PRODUCTS are guaranteed against defective materials and manufacture and are sold subject to its standard terms and conditions of sale. 09.01.04

LEYCO CHEMISCHE LEYDE GmbH, Industriestr. 155, D - 50999 Cologne,

Tel.: +49 2236 - 9 66 00 0, Fax: +49 2236 - 9 66 00 11,

email: leycochem@leyde.com, internet: www.leyde.com